

HOW TO Digital Flipchart



Website DigiLLabs

Switch on the flipchart using the power button to the left of the available ports, below the display.

FLIPCHART

Use the passive styluses provided for writing and highlighting, and your palm to erase. Work on a blank white screen or use one of the many templates (e.g. calendars, to-do lists, etc.). To open the settings, tap the arrow icon at the bottom of the screen.



- Click here to access the settings and the collection of recordings.



- You can use this icon to select content and then edit or export it.



- Tap this icon to open an overlay, allowing you to write and draw on existing notes and files without altering the original files.



- Please create another page here.



- This closes the current list and creates a new one.

EXTERNAL DEVICES



- Click on the arrow at the top of the screen. Now, you can import images, audio and video files from a USB stick, laptop or other devices. These open in separate windows on the screen. You can now arrange them as you like, rotate them, pause them or take screenshots.



- You can use the same method to select devices for exporting your list

BEFORE YOU GO



- Close your list and either delete it or save it to an external device. Make sure both pens are securely attached to the display using the magnets. Then switch off the board.